


Microwave Oven and Induction Cooker Control Panel Stickers

Replacement control panel stickers are designed for microwave ovens and induction cookers. The durable stickers feature clear, easy-to-read labels for functions such as power levels, cooking times, and specific food settings.

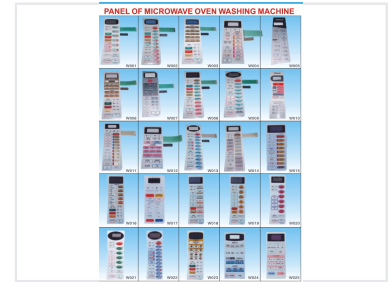

Product Overview

Restoration and Replacement Stickers

These replacement control panel stickers are designed to restore the functionality and appearance of worn or damaged control panels on microwave ovens, induction cookers, and washing machines. Featuring clear, easy-to-read labels for essential functions like power levels and cooking times, they provide a cost-effective solution for appliance maintenance. The collection includes a wide variety of model-specific options, ensuring broad compatibility and straightforward installation for professional repair technicians.

Compatibility

Compatible Appliances

Microwave Oven, Induction Cooker, Washing Machine

Product Details

Available Model Codes

- W001
- W002
- W003
- W004
- W005
- W006
- W007
- W008
- W009
- W010
- W011
- W012
- W013
- W014
- W015
- W016
- W017
- W018
- W019
- W020
- W021
- W022
- W023
- W024
- W025

Key Function Labels

Power Levels • Cooking Times • Food Settings